

## Cleaning tabs


# A 15 MC

Tabs for the self-cleaning programme of Winterhalter warewashers

### AREA OF APPLICATION:

- Suitable for use with the automatic self-cleaning programme of Winterhalter warewashers.
- Suitable for use as required in all commercial warewashers.
- Suitable for the removal of limescale.
- Not suitable for silver, aluminium (even anodised) and metal alloys.
- Removes unpleasant odours.

For perfect wash results, we recommend using the specially developed Winterhalter system, which includes the corresponding warewasher, chemistry and water treatment.

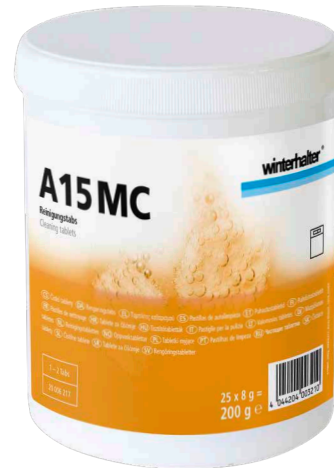


### DOSAGE:

#### Use in the warewasher:

- Please follow the self-cleaning programme of the Winterhalter warewasher.
- Remove the film before use.
- Remove the strainer and the strainer filter for manual cleaning and place the tablet in the wash tank.
- Follow the recommended dosage for a self-cleaning process:

Machine	Dosage
UC	1 Tab
PT	2 Tabs
UF	2 – 3 Tabs
STR/MTR/MTF	1 per wash tank

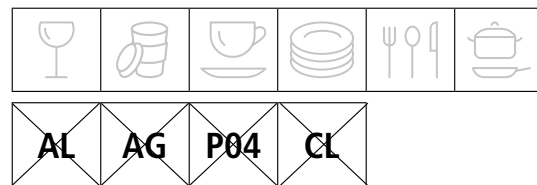

### PRODUCT ADVANTAGES:

- Optimal care effect
- Simple handling
- Fast dissolving
- With a pleasant fresh fragrance

### INGREDIENTS:

Non-ionic surfactants, phosphates, fragrances

It contains neither chlorine nor phosphates.  
Winterhalter products are totally free of NTA and EDTA.

## Cleaning tabs

# A 15 MC

### DELIVERY SIZES:

0.05 kg	can
10 x 0.2 kg	can

### TECHNICAL DATA:

Colour	white
Odour	product-specific
Shelf life	24 months
pH value	9.5 (16 g/l)
Storage conditions	cool, dark, frost-free, up to 25 °C
Weight per tab	approx. 8 g

### DISPOSAL OF EMPTY PACKAGING:

- Completely emptied packaging is recyclable and can be disposed of by the end user in accordance with local regulations.
- Information on disposal of product residues can be found in the corresponding material safety data sheet.

### IMPORTANT:

- Product is not intended for the general public. For commercial use only!
- Colour variations of the product are caused by raw materials and storage, but do not affect quality.
- Storage and transport of the product are only permitted when being in an upright position and in the original packaging. Do not expose to direct sunlight and protect from freezing.
- Never mix with other products and do not transfer the product into other containers, such as bottles, which are not intended for this purpose!
- Follow the operating instructions of the respective Winterhalter warewasher!
- To ensure the durability and reliability of the warewasher, all filters should be cleaned at end of operation. To avoid corrosion, leave the machine slightly open so the interior can dry.
- The washing parameters should be kept in accordance with the

DIN guidelines (DIN 10510 to 10512 and DIN 10522). Information of Working Party of Commercial Dishwashing should be kept in mind. In context refer to: [www.akggs.de](http://www.akggs.de)

- Product's material safety data sheet, technical data sheet and operating instructions are available on [www.winterhalter.com](http://www.winterhalter.com)

### SAFETY NOTES:

H319	Causes serious eye irritation.
P101	If medical advice is needed, have product container or label at hand.
P102	Keep out of reach of children.
P280	Wear protective gloves/protective clothing/eye protection/face protection.
P305 + P351 + P338	IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.
P337 + P313	If eye irritation persists: Get medical advice/attention.
P501	Disposal in accordance with local regulations.
EUH208	Contains 1-(1,2,3,4,5,6,7,8-octahydro-2,3,8,8-tetramethyl-2-naphthyl)ethan-1-one, 1-(2,2,6-Trime-thyl-1-Cyclohexenyl)-1-Penten-3-on. May produce an allergic reaction.